

PART NUMBER

K-10-004

Combo Kits

PRODUCT INFORMATION



PRODUCT LINE
Combo Kits

COLOR
Blue & Yellow

VARIATION
Front & Rear

BOX INFORMATION

SHIPPING DIMENSIONS



BOX DESCRIPTION
Large 2 Pack SumoSPring Box

BOX NUMBER
512515

TAPE MACHINE POSITION
#38 // 36" (91.44cm)

BILL OF MATERIALS

Item	Part #	Discription	QTY
A	SSF-173-40-2	SumoSPrings Front Kit	1
B	SSR-187-54-1	SumoSPrings Rear Kit	1
C	512515	Large 2 Pack SumoSPring Box	1

SUMOSPRINGS FRONT



A SUMOSPRINGS FRONT
SSF-173-40-2


SUMOSPRINGS REAR



B SUMOSPRINGS REAR
SSR-187-54-1

PACKING INSTRUCTIONS

1. Locate the preassembled kits needed to build the combo kit as listed in the Bill of Materials section.
2. Start by building the kit box according to the Box Guide.
3. Place the kits in the box with the top of each box facing up (refer to diagram below). Push the kit boxes to the front of the combo kit box and using the filler paper machine, release enough paper to fill the space along the back side of the box. The SumoSPrings kits should fit snug with little to no movement.

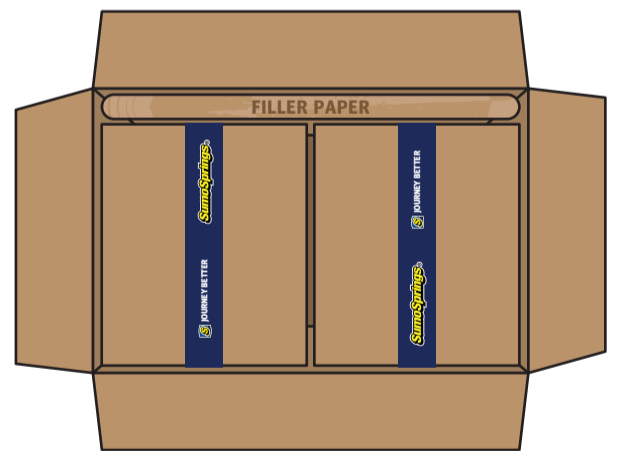

4. Close the top of the box by completing the steps referenced in the Box Guide.

5. Using the scanner (refer to scanner instructions) print out a label.

6. Position label horizontally, on the left side of the end of the box with the SuperSprings International logo side to the left (refer to Completed Kit Diagram).

7. Place the finished kit in the applicable bin.

COMPLETED KIT



COMPLETED KIT WEIGHT
68lbs (30.84 kg.)