

PART NUMBER

**K-30-006**

**Combo Kits**

**PRODUCT INFORMATION**




**PRODUCT LINE**  
Combo Kits

**COLOR**  
Blue & Black

**VARIATION**  
Front & Rear

**BOX INFORMATION**

**SHIPPING DIMENSIONS**

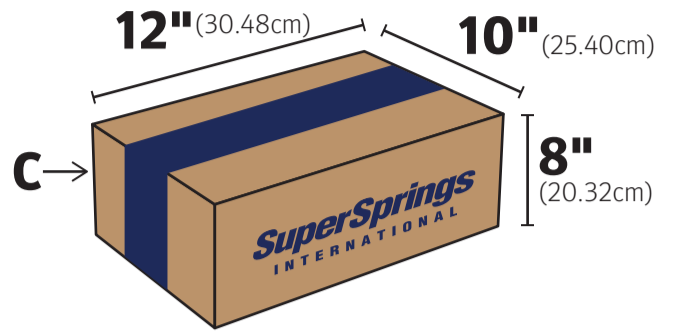

**BOX DESCRIPTION**

Small 2 Pack SumoSprings Box

**BOX NUMBER**  
512516

**TAPE MACHINE POSITION**  
#22 // 20" (50.80cm)

**BILL OF MATERIALS**

Item	Part #	Discription	QTY
A	SSF-106-40	SumoSprings Front Kit	1
B	SSR-338-47	SumoSprings Rear Kit	1
C	512516	Small 2 Pack SumoSprings Box	1

**SUMOSPRINGS FRONT**



**A** **SUMOSPRINGS FRONT**  
SSF-106-40

**SUMOSPRINGS REAR**



**B** **SUMOSPRINGS REAR**  
SSR-338-47

**PACKING INSTRUCTIONS**

1. Locate the preassembled kits needed to build the combo kit as listed in the Bill of Materials section.
2. Start by building the kit box according to the Box Guide.
3. Place the kits in the box with the side of each box facing up (refer to diagram below). Push the kit boxes to the front of the combo kit box and using the filler paper machine, release enough paper to fill the space along the back side of the box. The SumoSprings kits should fit snug with little to no movement.



4. Close the top of the box by completing the steps referenced in the Box Guide.

5. Using the scanner (refer to scanner instructions) print out a label.

6. Position label horizontally, on the left side of the end of the box with the SuperSprings International logo side to the left (refer to Completed Kit Diagram).

7. Place the finished kit in the applicable bin.

**COMPLETED KIT**



**COMPLETED KIT WEIGHT**  
7lbs (3.18 kg.)