

PART NUMBER
SSC-50



PRODUCT INFORMATION




PRODUCT LINE
SuperCoils

COLOR
Black

BOX INFORMATION

SHIPPING DIMENSIONS


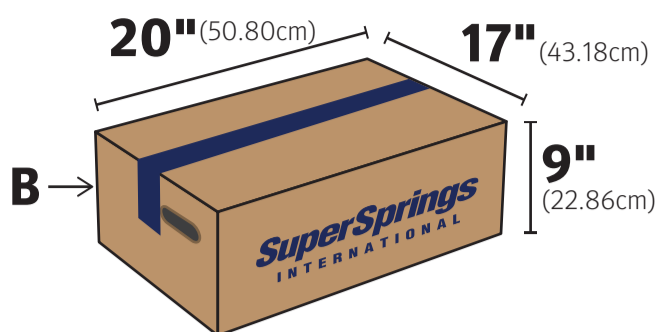


BOX DESCRIPTION
Medium SuperCoil Box
BOX NUMBER
220002


TAPE MACHINE POSITION
#28 // 26" (66.04cm)
(Top Only)

BILL OF MATERIALS

| Item | Part # | Discription | QTY |
|------|------------|-----------------------|-----|
| A | 202050 | SuperCoil SSC-50 | 2 |
| B | 220002 | Medium SuperCoil Box | 1 |
| C | 220013 | Insert for Box 220002 | 1 |
| D | 122363 | S-Badge Sticker | 1 |
| E | 122369 | Warranty Card | 1 |
| F | INS_SSC-50 | Install Guide | 1 |

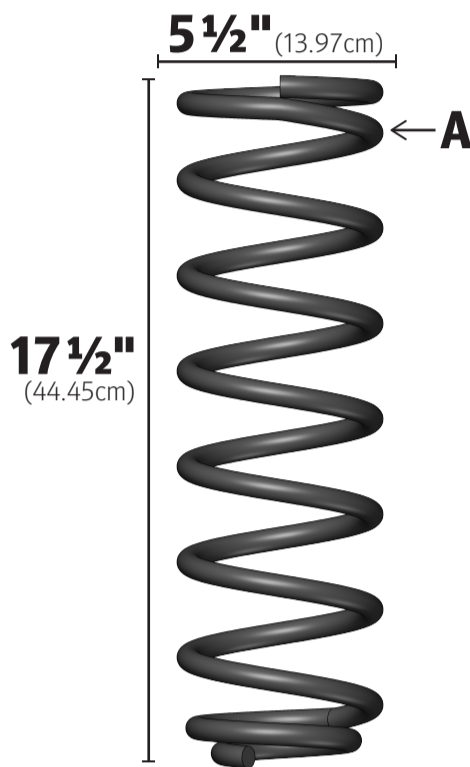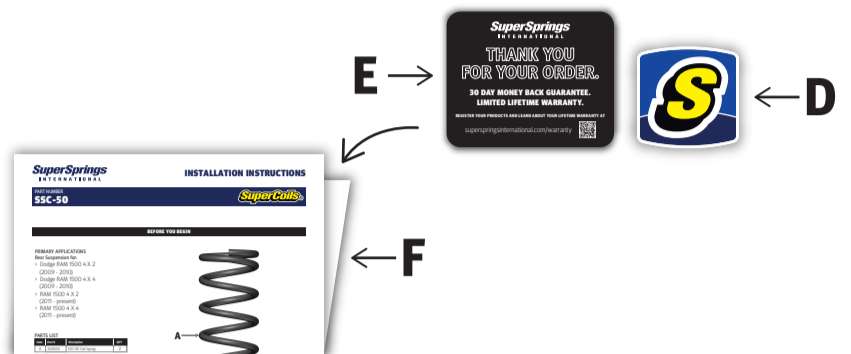

BOX INSERT

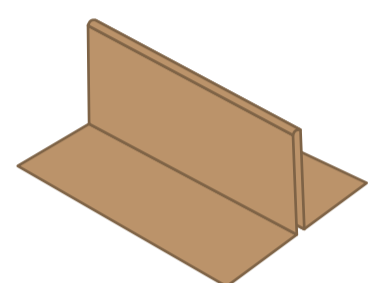

C SUPERCOIL BOX INSERT
220013

If the SuperCoil comes packaged in a bag without foam from the supplier, leave the SuperCoil in the bag and skip steps 6 - 8.

If the SuperCoil comes wrapped in foam from the supplier, please remove the foam and continue with the steps below.

TOOLS REQUIRED

- > Protective gloves
- > Safety glasses
- > Back brace*
- > Measuring tape
- > Microfiber towel
- > 12" (30.48cm) Plastic tubing
- > Filler paper machine
- > Filler paper

BEFORE YOU BEGIN


PLEASE NOTE

All of the following steps that are highlighted in yellow require you to wear protective gloves and safety glasses to complete.


*Wear a back brace to lift or shift any object that can't be easily supported. In most cases, when assembling components over 25lbs (11.34 kg.)

PACKING INSTRUCTIONS

1. Print or retrieve one set of installation instructions per kit. Always use the current, approved, document revision.
2. Fold instructions in half, placing the warranty card and stickers within the folded document. Set them aside.
3. Locate and review components needed to build kit as listed in the Bill of Materials section.
4. Start by building the kit box according to the Box Guide.
5. Pull two part A SuperCoils from inventory. Visually inspect the height of the two SuperCoils, and ensure they match each other. If not, select another component until both match in height. If needed, use the measuring tape for assistance with accuracy.
6. Using a damp microfiber towel, wipe clean the SuperCoils of any dust or debris.
7. Retrieve the 12" (30.48cm) wide plastic tubing to create a protective bag for each SuperCoil.
8. Insert one part A SuperCoil into the plastic tubing. Cut the plastic tubing 3" to 4" (7.62 - 10.16cm) extra to cover both ends of the SuperCoil. Ensure plastic tubing is securely wrapped around the ends of each SuperCoil. Repeat this step for the other SuperCoil.

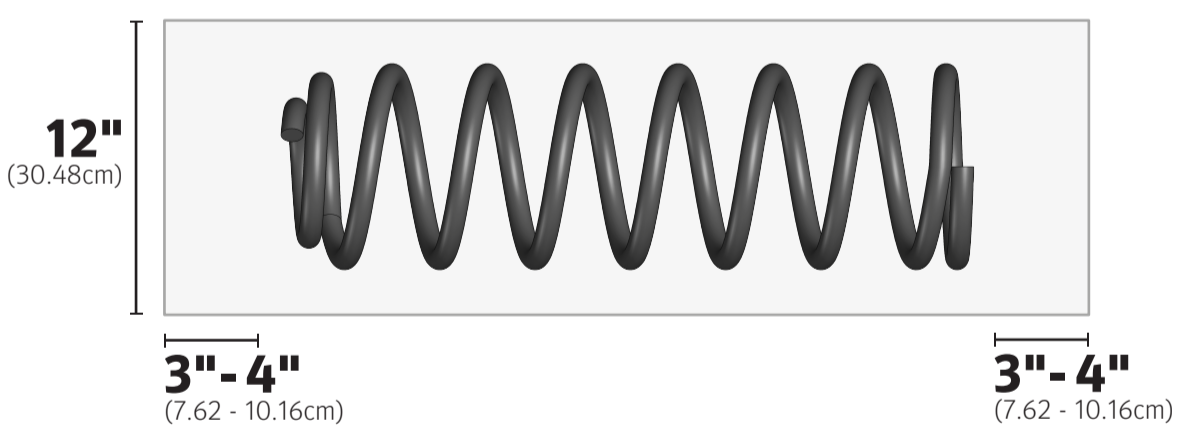

9. Retrieve the box and place one part A SuperCoil inside the box on one side of the insert (refer to diagram below). Place the other SuperCoil on the other side of the insert. Using the filler paper machine, release enough paper to fill the space it between the SuperCoils and around the box. The SuperCoils should fit snug with little to no movement.

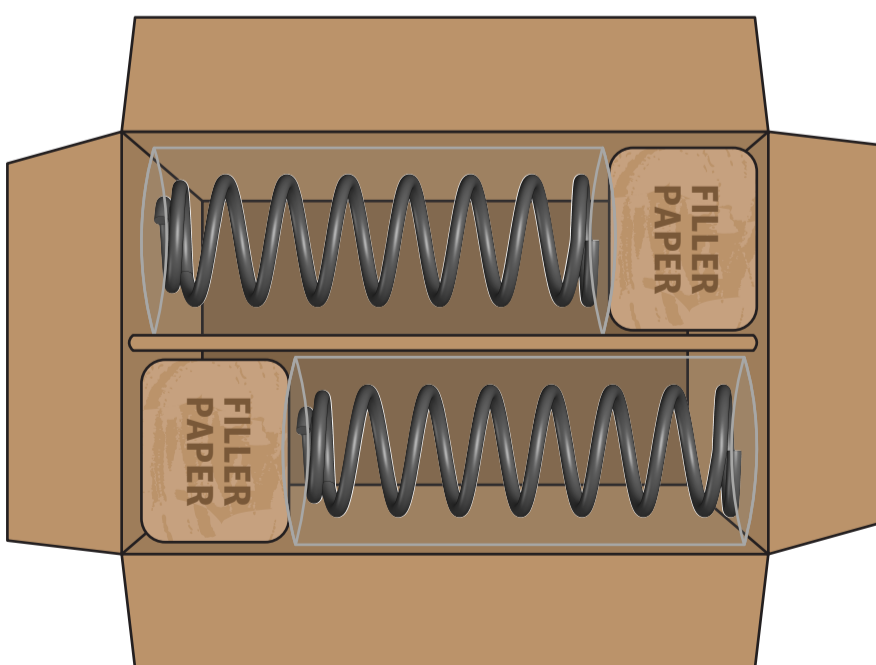

10. Retrieve the installation instructions packet, which should contain the warranty cards and SSI sticker, and place it on top of the components in the box.

11. Close the top of the box by completing the steps referenced in the Box Guide.

12. Using the scanner (refer to scanner instructions) print out a label.

13. Position label horizontally, on the left side of the end of the box with the SuperSprings International logo side to the left (refer to Completed Kit Diagram).

14. Place the finished kit in the applicable bin.

COMPLETED KIT



COMPLETED KIT WEIGHT
22lbs (9.98kg.)